

Hotel Phone

Hotel Phone Quick Installation Guide



[Overview](#)

Included Accessories



Hotel Phone



Handset



Power adaptor
(Optional)



Handset cord




Quick Installation Guide



Ethernet Cable

2 The Appearance of Product

Front view and keypad instruction:

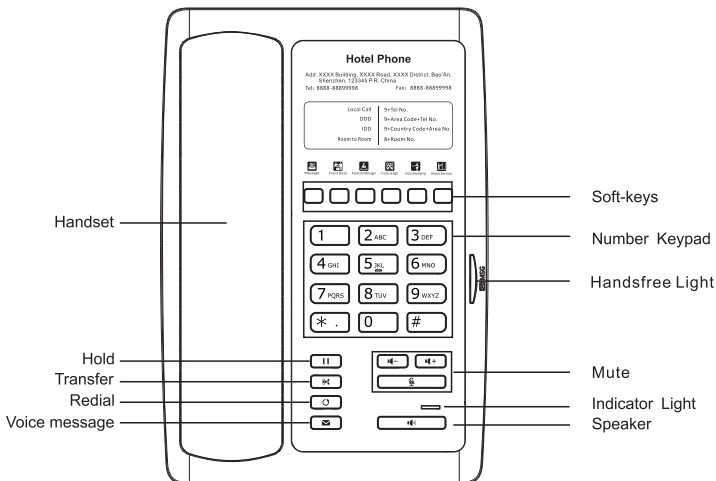


You can press these number keys one or more times to complete the corresponding input when you want do some input on the LCD.

Key	Text Mode		Key	Text Mode	
	Normal(ABC)	Numeric(0-9)		Normal(ABC)	Numeric(0-9)
1		1	7 PQRS	PQRSpqrs	7
2 ABC	ABCabc	2	8 TUV	TUVtuv	8
3 DEF	DEFdef	3	9 WXYZ	WXYZwxyz	9
4 GHI	GHIghi	4	* .		0
5 JKL	JKLjkl	5	0	#@.:/!\$%& () < > [] ~ ! _ = + - ?	*
6 MNO	MNOmno	6	#		#

3 Connecting IP Phone


Connect the IP Phone as shown by the following diagram:

Wide Area Network/Internet

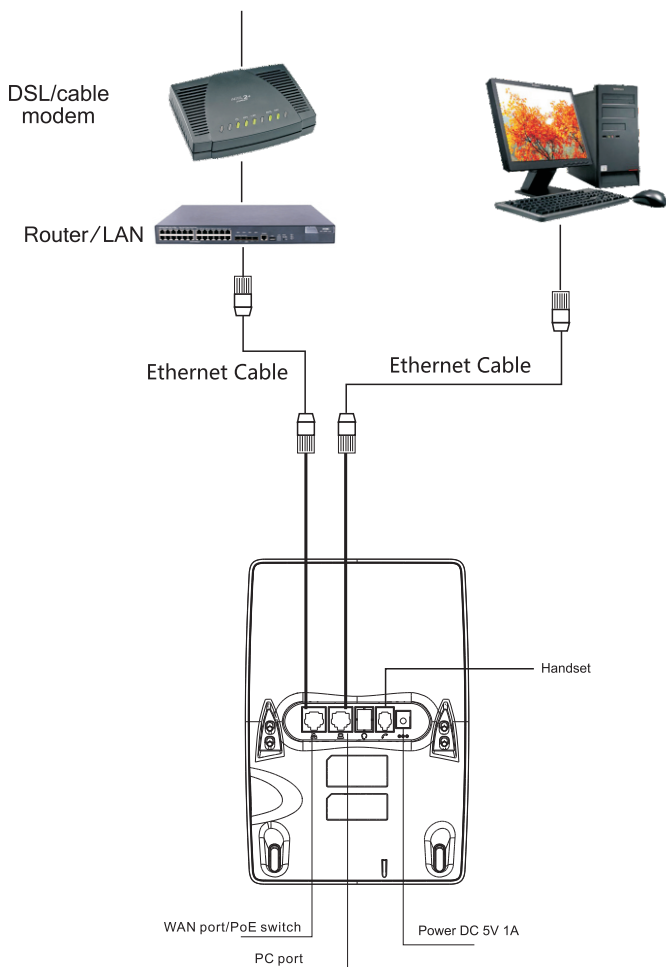


4 IP Phone Setup Menu(1)

Network mode Settings diagram:

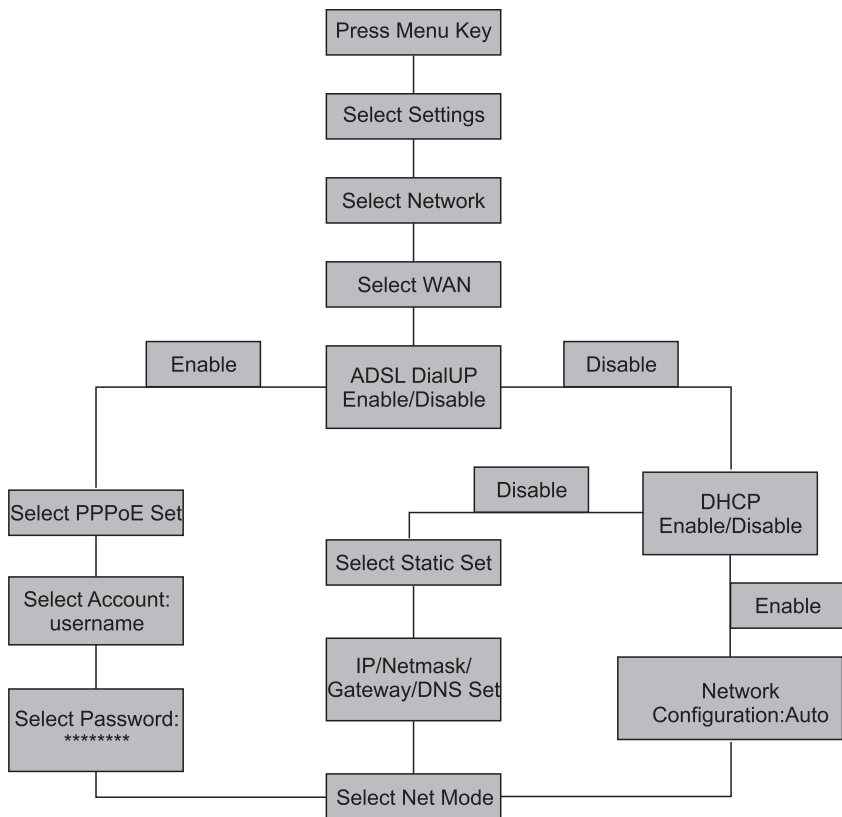

5 IP Phone Setup Menu(2)

The menu of phone Structure:

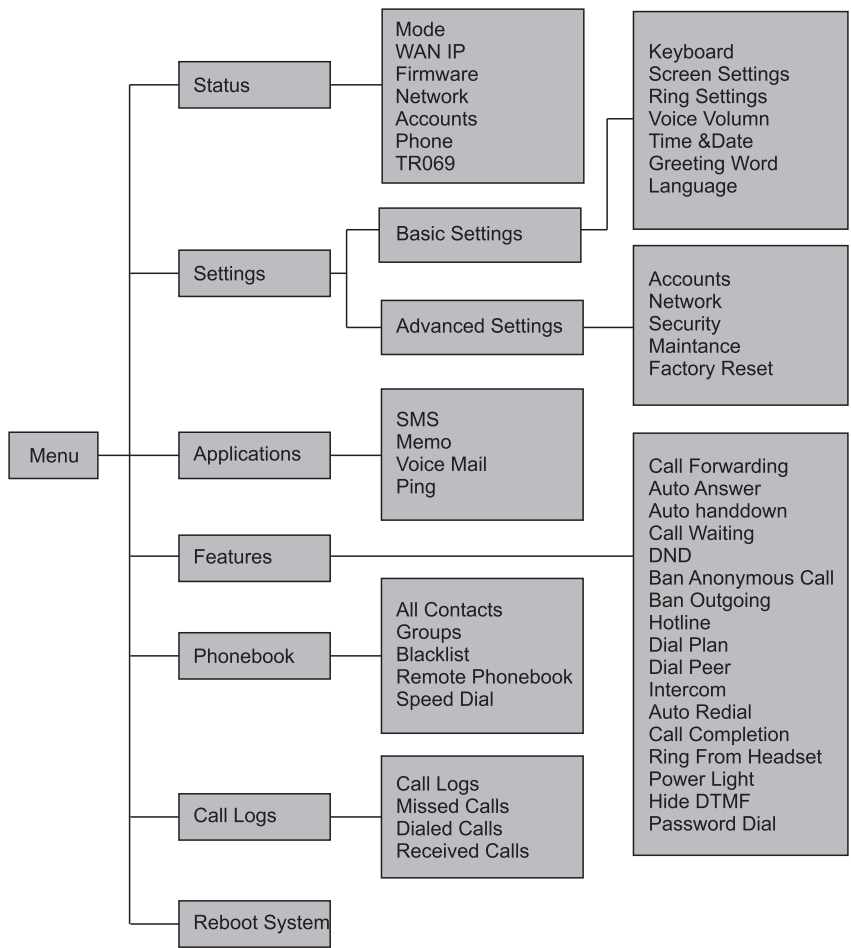


6 Configuration

Configuring via Web


The configuration menu can be accessed using the convenient and user friendly interface of a web browser:



Open the browser and type into the IP address which can be found in the status of the LCD menu (e.g. `http://172.16.2.88`) to visit the Web page and make some configuration.

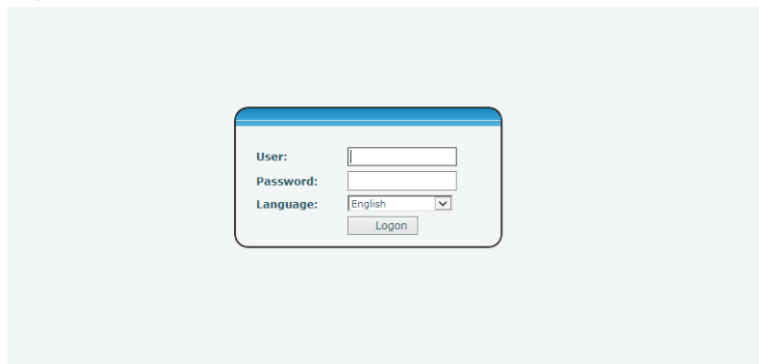

Enter the username and password, and both of the default username and password are "admin". After your logon, the Web page will be displayed as follows:

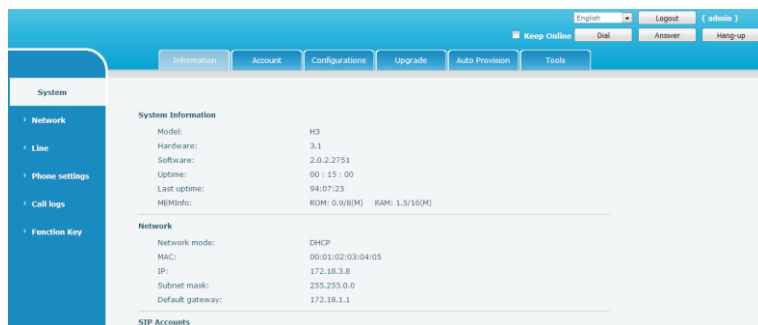

7 Configuration

Network --PPPoE Setting

Select Network from the main menu.

Select PPPoE as network connection type if your ISP uses PPPoE.

The screenshot shows the 'Network' configuration page in a web interface. The 'Basic' tab is selected. Under 'Network Status', the following information is displayed:

IP:	172.18.3.8
Subnet mask:	255.255.0.0
Default gateway:	172.18.1.1
MAC:	00:01:02:03:04:05
MAC Timestamp:	3316AC0M

Under 'Settings', the 'Static IP' radio button is selected, and the 'PPPoE' radio button is also selected. The 'PPPoE' settings are as follows:

Static IP	<input type="radio"/>	DHCP	<input type="radio"/>	PPPoE	<input checked="" type="radio"/>
PPPoE Username:	<input type="text"/>				
PPPoE Password:	<input type="password"/>				
Primary DNS Server:	<input type="text"/>				
Secondary DNS Server:	<input type="text"/>				

An 'Apply' button is located at the bottom of the settings section.

Network---Static Setting

Select Static as network connection type if all wide area network IP is provided to you by your ISP.

The screenshot shows the 'Network' configuration page in a web interface. The 'Basic' tab is selected. Under 'Network Status', the following information is displayed:

IP:	172.18.3.8
Subnet mask:	255.255.0.0
Default gateway:	172.18.1.1
MAC:	00:01:02:03:04:05
MAC Timestamp:	3316AC0M

Under 'Settings', the 'Static IP' radio button is selected, and the 'DHCP' radio button is also selected. The 'Static IP' settings are as follows:

Static IP	<input checked="" type="radio"/>	DHCP	<input type="radio"/>	PPPoE	<input type="radio"/>
IP:	<input type="text"/>				
Subnet mask:	<input type="text"/>				
Default gateway:	<input type="text"/>				
Primary DNS Server:	<input type="text"/>				
Secondary DNS Server:	<input type="text"/>				

An 'Apply' button is located at the bottom of the settings section.

8 Configuration

Network --DHCP Setting

Select DHCP as network connection type if your access network supports DHCP .

The screenshot shows the 'Network' configuration page in a web interface. The 'Basic' tab is selected. Under 'Network States', the following information is displayed: IP: 172.16.3.8, Subnet mask: 255.255.0.0, Default gateway: 172.16.1.1, MAC: 00:01:02:03:04:05, and MAC Timestamp: 3316AC0H. In the 'Settings' section, 'Static IP' is disabled, and 'DHCP' is selected. The 'DNS Server Configured by' is set to 'DHCP'. The 'Primary DNS Server' is 172.16.1.1 and the 'Secondary DNS Server' is 0.0.0.0. An 'Apply' button is visible at the bottom of the settings section.

SIP Settings

Select SIP settings from the main menu. The follow fields such as Server Address, Server port, Authentication User, Authentication Password and SIP User are required. Then check Enable Registration and click Apply to register your phone to SIP server.

The screenshot shows the 'SIP' configuration page. The 'SIP' tab is selected. Under 'Line', 'SIP 1' is selected. In the 'Basic Settings >>' section, 'Line Status' is 'Inactive'. There are input fields for 'Username', 'Display name', 'Authentication Name', 'Authentication Password', and 'Activate'. On the right side, there are input fields for 'SIP Proxy Server Address', 'SIP Proxy Server Port' (set to 5060), 'Outbound proxy add.', 'Outbound proxy port', and 'Realm'. In the 'Advanced Settings >>' section, there is an 'Apply' button.

Server Address

SIP server address

Server Port

SIP server port number

Authentication User

Username for logging into the SIP server

Authentication password

Password for logging into the SIP server

SIP user

SIP phone number

9 Make a Phone call

IP Address:

1. Lift the handset or press the speaker button or headset button to enter the dialer interface.
2. Dial IP address.

For example: Input 172.16.2.62# in the dialer interface, you will call the device whose IP address is 172.16.2.62.

SIP Number:

Note: You have to register with SIP server to use SIP number.

1. Lift the handset or press the speaker button or headset button to enter the dialer interface.
2. Dial SIP number

For example: Input 4352

3. Press “#”button or wait until the time expires.