



MANUAL

EP-107A


Parts

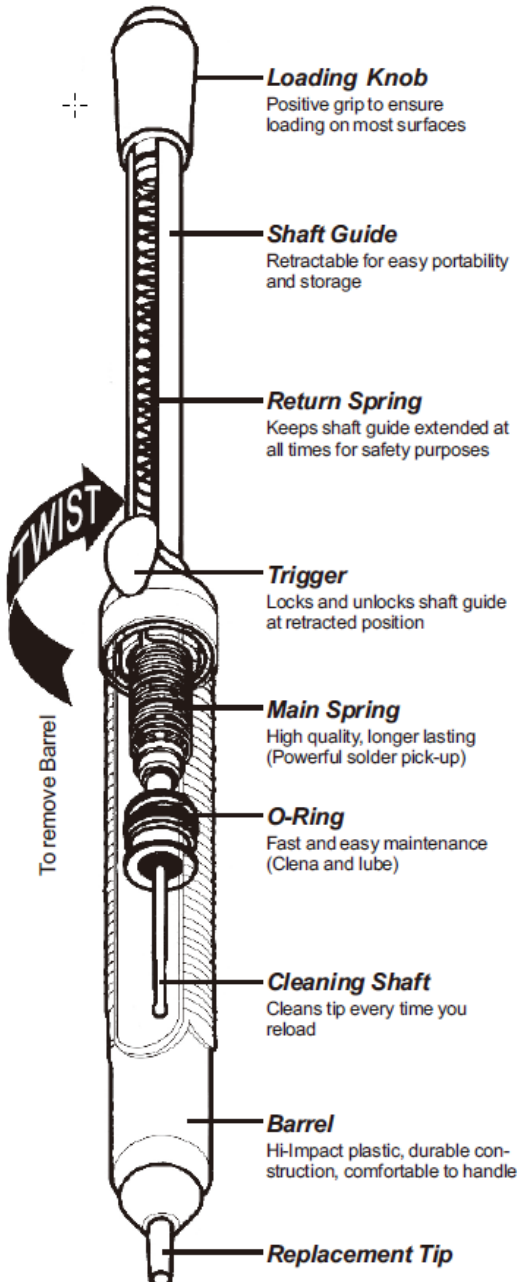


Basic Operation

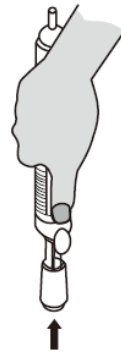

To Load
Push loading knob down until it clicks.

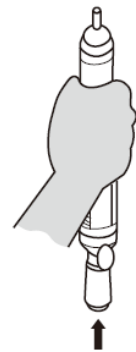

Tip Replacement
Push loading knoball the way down until tip pops out.

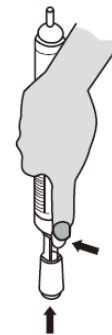

To Retract Shaft Guide
Push down loading knob and at the sametime press trigger.
To release,push loading knob further.
Do not press trigger.

