

# MEITRACK T366G User Guide



## Change History

|            |                           |               |                        |
|------------|---------------------------|---------------|------------------------|
| File Name  | MEITRACK T366G User Guide | Created By    | Kyle Lv                |
| Project    | T366G                     | Creation Date | 2016-07-15             |
|            |                           | Update Date   | 2017-03-16             |
| Subproject | User Guide                | Total Pages   | 17                     |
| Version    | V1.3                      | Confidential  | External Documentation |

## Contents

|  |        |
|--|--------|
| 1 Copyright and Disclaimer .....                             | - 4 -  |
| 2 Product Overview .....                                     | - 4 -  |
| 2.1 Product Features.....                                    | - 4 -  |
| 2.1.1 Harsh Acceleration/Braking Alarm.....                  | - 4 -  |
| 2.1.2 GPS Data Filtering .....                               | - 5 -  |
| 2.1.3 Activating Output by Event .....                       | - 5 -  |
| 2.1.4 Idling Detection.....                                  | - 5 -  |
| 2.1.5 I/O Port Mode Changing .....                           | - 5 -  |
| 3 Product Functions and Specifications .....                 | - 6 -  |
| 3.1 Product Functions.....                                   | - 6 -  |
| 3.1.1 Position Tracking.....                                 | - 6 -  |
| 3.1.2 Anti-Theft.....  | - 6 -  |
| 3.1.3 Other Functions .....                                  | - 6 -  |
| 3.1.4 Functions of Optional Accessories.....                 | - 6 -  |
| 3.2 Specifications.....                                      | - 7 -  |
| 4 T366G and Accessories .....                                | - 7 -  |
| 5 Device Panel .....   | - 8 -  |
| 6 First Use .....  | - 9 -  |
| 6.1 Installing the SIM Card.....                             | - 9 -  |
| 6.2 LED Indicator.....                                       | - 9 -  |
| 6.3 Device Configuration .....                               | - 9 -  |
| 6.3.1 Installing the USB Driver .....                        | - 9 -  |
| 6.3.2 Configuring Device Parameters by Meitrack Manager..... | - 10 - |
| 6.4 Tracking by Mobile Phone.....                            | - 11 - |
| 6.5 Common SMS Commands .....                                | - 12 - |
| 6.5.1 Real-Time Location Query – A00.....                    | - 12 - |
| 6.5.2 Setting Authorized Phone Numbers – A71 .....           | - 12 - |
| 6.5.3 Setting the Smart Sleep Mode – A73 .....               | - 13 - |
| 6.5.4 Controlling Output Status – C01 .....                  | - 13 - |
| 6.5.5 Setting I/O Port Status – C08 .....                    | - 13 - |
| 6.5.6 Setting Idling Time – D34 .....                        | - 14 - |
| 7 Logging In to MS03 Tracking System.....                    | - 15 - |
| 8 Installing the T366G.....                                  | - 15 - |
| 8.1 Installing an I/O Cable.....                             | - 15 - |
| 8.1.1 Interface Definition .....                             | - 15 - |
| 8.1.2 Wiring Diagram .....                                   | - 17 - |
| 8.2 Mounting the T366G.....                                  | - 17 - |

## 1 Copyright and Disclaimer

Copyright © 2017 MEITRACK. All rights reserved.

 and  are trademarks that belong to Meitrack Group.

The user manual may be changed without notice.

Without prior written consent of Meitrack Group, this user manual, or any part thereof, may not be reproduced for any purpose whatsoever, or transmitted in any form, either electronically or mechanically, including photocopying and recording.

Meitrack Group shall not be liable for direct, indirect, special, incidental, or consequential damages (including but not limited to economic losses, personal injuries, and loss of assets and property) caused by the use, inability, or illegality to use the product or documentation.

## 2 Product Overview

The T366G is a vehicle GPS tracker with IP67 water-resistance rating and can be installed into cars, motorcycles, yachts, and boats. It is equipped with built-in GPS and GSM antennas. The unit can work well in extreme environments.


### 2.1 Product Features

#### 2.1.1 Harsh Acceleration/Braking Alarm

You can detect the harsh acceleration/braking alarm by setting the limit value.

Cautions on device installation:

1. The device should be installed into the vehicle according to the following direction.
2. The device installation angle cannot exceed 15 degrees.

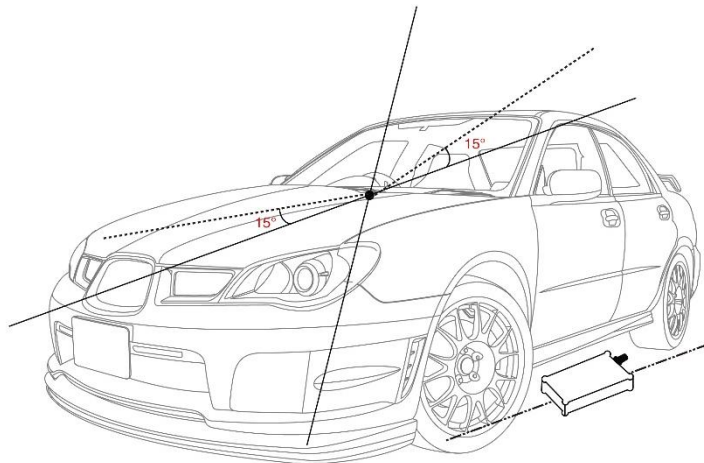

The default harsh acceleration and braking alarm values are 230 mG and -300 mG respectively.

Accelerate and decelerate alarm

|                        |                                   |    |
|------------------------|-----------------------------------|----|
| Accelerate alarm value | <input type="text" value="230"/>  | mG |
| Decelerate alarm value | <input type="text" value="-300"/> | mG |

Note: The alarm results vary according to the device installation, vehicle model, vehicle weight, and driving behaviors. After the device has been installed properly, you can use the Meitrack Manager software to adjust the harsh acceleration and braking alarm values by every 10 mG. You can also use the D79 command to set the values.

### 2.1.2 GPS Data Filtering

The GPS data filtering function can ensure GPS data accuracy and eliminate static drift.

You can set the following parameters by Meitrack Manager: **GPS speed range**, **GPS positioning accuracy**, and **Number of GPS satellites**. When the GPS data filtering function is enabled, if all conditions are met, GPS data will be updated.

GPS data filtering

Enable GPS data filtering (If all conditions below are met, GPS data will be updated.)

GPS speed range       To  km/h

GPS positioning accuracy <       \*10

Number of GPS satellites >

Note: This function can be enabled by Meitrack Manager.

### 2.1.3 Activating Output by Event

You can activate output by event.

For example:

1. When speeding is detected, the device can control buzzer sounds.
2. When unauthorized ignition or GPS antenna cut-off is detected, the engine will not be able to start.
3. When iButton triggering is detected, the device can control engine startup.
4. When input or output status is detected, the output will be active or inactive.

### 2.1.4 Idling Detection

This function is used to detect whether a vehicle's engine is switched off while parking. To enable the function, you must connect input 2 to ACC detection.

When the device detects that the driving speed is 0 and the ACC is on for one consecutive minute (default time), an idling alarm will be generated.

For details, see section 6.5.6 "Setting Idling Time – D34."

### 2.1.5 I/O Port Mode Changing

This function is used to change the I/O port mode. For example, change active negative input to analog port or positive input.

For details, see section 6.5.5 "Setting I/O Port Status – C08."

## 3 Product Functions and Specifications

### 3.1 Product Functions

#### 3.1.1 Position Tracking

- GPS + LBS positioning
- Real-time location query
- Track by time interval
- Track by distance
- Track by mobile phone
- Speeding alarm
- Cornering report

#### 3.1.2 Anti-Theft

- Polygonal geo-fence alarm
- Engine or vehicle door status alarm
- Remote vehicle fuel/power cut-off
- GPS blind spot alarm
- Towing alarm

#### 3.1.3 Other Functions

- SMS/GPRS (TCP/UDP) communication (Meitrack protocol)
- Built-in 8 MB buffer for recording driving routes
- IP67 water-resistance rating
- Mileage report
- Roaming parameter settings
- Smart sleep mode
- Built-in 3-axis accelerometer
- Online Parameter Editor
- GPS data filtering
- Activate output by event
- Stop Moving and Start Moving alarms
- Vehicle power protection
- Idling alarm

#### 3.1.4 Functions of Optional Accessories

| Optional Accessories                                 | Function  |
|--|---|
| iButton  | Identify the driver ID and grant permission to start the vehicle.   |
| A53 fuel level sensor                                | Check the fuel level and detect a fuel theft alarm.   |
| Digital temperature sensor                           | Check temperature (Used with the A61 sensor box).   |
| 400 mAh/3.7 V high-temperature battery (0°C to 80°C) | The device can continuously work after the external power supply is cut off.<br>When the battery power is low, a low power alarm will be generated. |

|  |   |
|--|---|
| 400 mAh/3.7 V normal-temperature battery (-20°C to 60°C) | The device can continuously work after the external power supply is cut off.<br>When the battery power is low, a low power alarm will be generated. |
|--|---|

### 3.2 Specifications

| Item                   | Specifications   |
|------------------------|--|
| Dimension              | 80.5 mm x 60 mm x 23.5 mm  |
| Weight                 | 100g   |
| I/O power cable length | 50 cm  |
| Power supply           | DC 11–36 V/1.5 A   |
| Power consumption      | Current in standby mode: 65 mA   |
| Operating temperature  | -35°C to 80°C (available for the device without a battery)   |
| Operating humidity     | 5% to 95%  |
| LED indicator          | Green indicator showing the GSM signal<br>Blue indicator showing the GPS signal  |
| Button/Switch          | 1 upgrade button (used to manually upgrade the firmware)<br>1 power button   |
| Memory                 | 8 MB buffer  |
| Sensor                 | 3-axis accelerometer (used to wake the device up by vibration and detect towing alarms, harsh acceleration alarms, and harsh braking alarms)   |
| Frequency band         | T366G-E:<br>UMTS/HSDPA: 900/2100 MHz<br>GSM/GPRS: 900/1800 MHz<br>T366G-A:<br>UMTS/HSDPA: 850/1900 MHz<br>GSM/GPRS: 850/900/1800/1900 MHz<br>T366G-T:<br>UMTS/HSDPA: 850/2100 MHz<br>GSM: 850/900/1800/1900 MHz<br>Note: Select proper device according to the local frequency band. |
| GPS sensitivity        | -165 dB  |
| Positioning accuracy   | 2.5m   |
| I/O port               | 2 digital inputs and 1 analog detection input (0–30 V; selectable positive, negative, and analog detection inputs)<br>1 output<br>1 USB port<br>1 1-wire interface (configured as an output or a negative input)<br>1 output (voltage: 5V)   |

## 4 T366G and Accessories

T366G and standard accessories:



T366G



L wrench



USB cable



CD download card

Optional accessories:



iButton



A53 fuel level sensor




Temperature sensor



Battery


## 5 Device Panel

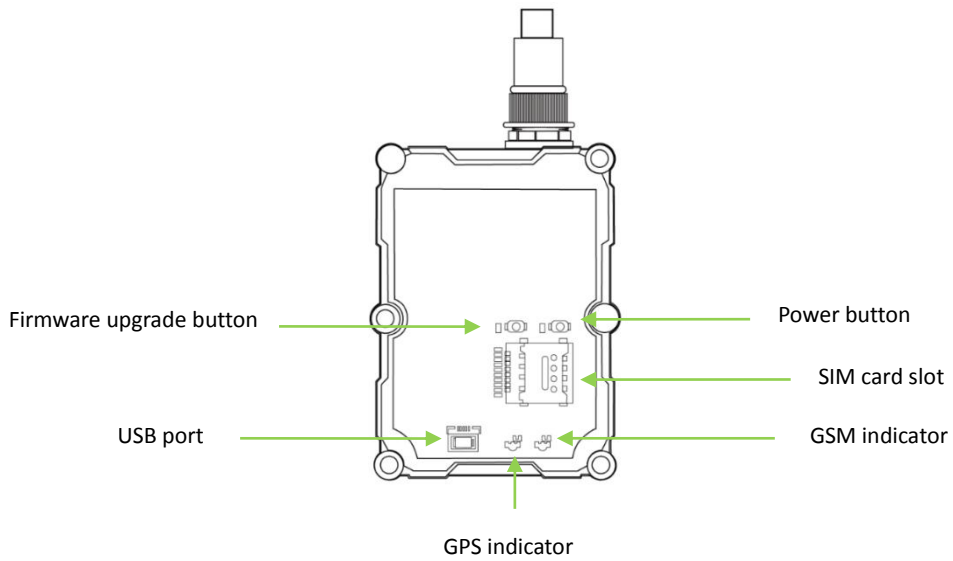



## 6 First Use

### 6.1 Installing the SIM Card

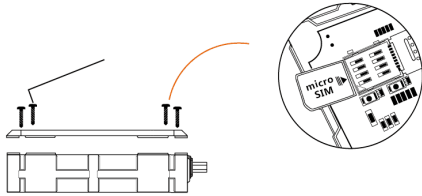

1. Use the screwdriver to open the back cover.
2. Insert the SIM card into the card slot (card chip facing down).
3. Close the cover, and tighten the screws.

Note:

- Power off the device before installing the SIM card.
- Ensure that the SIM card has sufficient balance.
- Ensure that the phone card PIN lock has been closed properly.
- Ensure that the SIM card in the device has subscribed the caller ID service if you want to use your authorized phone number to call the device.

### 6.2 LED Indicator


Press and hold down the power button for 3–5 seconds to start the device.

| GPS Indicator (Blue)                       |  |
|--|--|
| Blink (every 0.1 seconds)                  | The device is being initialized or the battery power is low. |
| Blink (0.1 seconds on and 2.9 seconds off) | A GPS signal is received.                                    |
| Blink (1 second on and 2 seconds off)      | No GPS signal is received.                                   |
| GSM Indicator (Green)                      |  |
| Steady on                                  | A call is coming in or a call is being made.                 |
| Blink (every 0.1 seconds)                  | The device is being initialized.                             |
| Blink (0.1 seconds on and 2.9 seconds off) | A base station signal is received.                           |
| Blink (1 second on and 2 seconds off)      | No base station signal is received.                          |

### 6.3 Device Configuration


#### 6.3.1 Installing the USB Driver

1. Decompress the **stsw-stm32102.zip** file provided by Meitrack, locate the following file, and install the USB driver on a computer with 64-bit Windows system.


 VCP\_V1.3.1\_Setup\_x64.exe

- After the installation is finished, connect the tracker to the computer by USB cable. If **STMicroelectronics Virtual COM Port (COM5)** is displayed on the **Computer Management** page, the driver is installed successfully.

Note: Please power on the tracker and then connect the tracker to the computer by USB cable. Otherwise, Meitrack Manager will be unavailable.

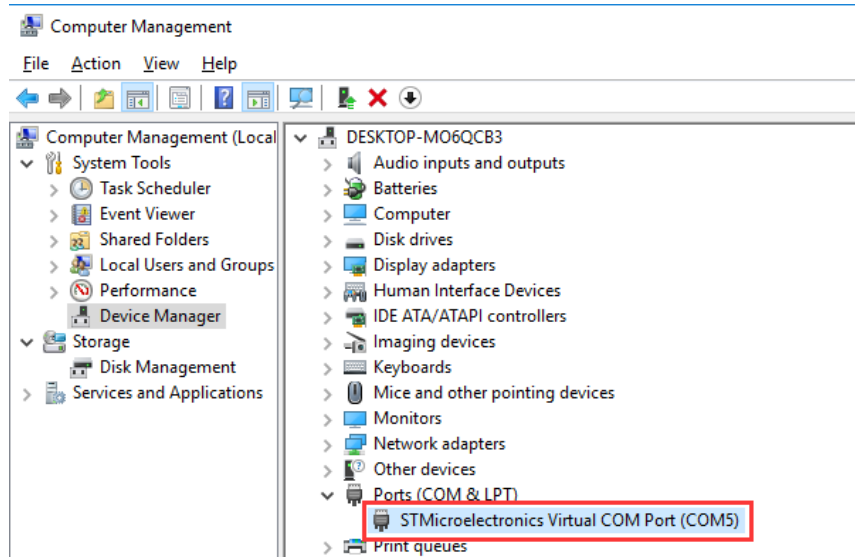

Note: After you finish the driver installation, if the preceding figure is not displayed, copy the **mdmcpq.inf** file to the **c:/windows/inf/** directory and **usbser.sys** file to the **C:/windows/system32/drivers/** directory. Then restart the computer.

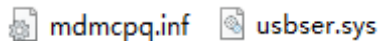


### 6.3.2 Configuring Device Parameters by Meitrack Manager


This section describes how to use Meitrack Manager to configure the device on a computer.

Procedure:

- Install the USB-to-serial cable driver and Meitrack Manager.
- Connect the device to a computer by using the USB-to-serial cable.

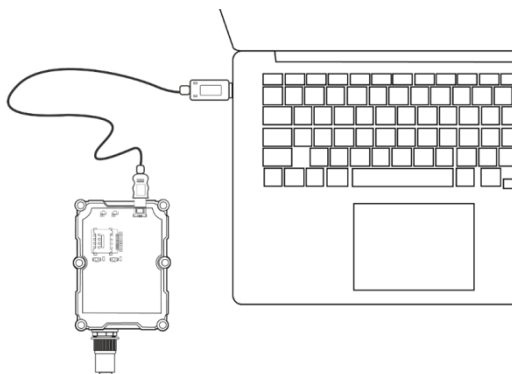

- Run Meitrack Manager, then the following dialog box will appear:

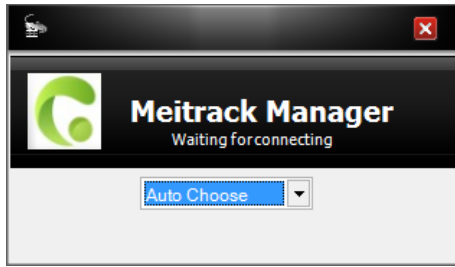

- Turn on the device, then Meitrack Manager will detect the device model automatically and the parameter page will appear accordingly.

For details about MEITRACK Manager, see the *MEITRACK Manager User Guide*.

### 6.4 Tracking by Mobile Phone

Call or send the **0000,A00** command by SMS to the device's SIM card number. The device will reply to an SMS with a map link. Click the SMS link. The device's location will be displayed on Google Maps on your mobile phone.

Note: Ensure that the device's SIM card number has subscribed the caller ID service. Otherwise, the tracking function by mobile phone will be unavailable.



SMS example:


Now,061314 10:36,V,26,0Km/h,96%,http://maps.meigps.com/?lat=22.513781&lng=114.057183

The following table describes the SMS format:

| Parameter    | Description  | Remarks   |
|--------------|--|---|
| Now          | Indicates the current location.                            | SMS header: indicates the current location or the alarm type. |
| 061314 10:36 | Indicates the date and time in <b>MMDDYY hh:mm</b> format. | None  |
| V            | The GPS is invalid.  | A = Valid<br>V = Invalid                                      |
| 26           | Indicates the GSM signal strength.                         | Value: 1–32   |

|   |   |  |
|---|---|--|
|   |   | The larger the value is, the stronger the signal is. If the value is greater than 12, GPRS reaches the normal level. |
| 0Km/h   | Indicates the speed.  | Unit: km/h   |
| 96%   | Indicates the remaining battery power.                                  | None   |
| <a href="http://maps.meigps.com/?lat=22.513781&amp;lng=114.057183">http://maps.meigps.com/?lat=22.513781&amp;lng=114.057183</a> | Indicates the map link.<br>Latitude: 22.513781<br>Longitude: 114.057183 | None   |

If your mobile phone does not support HTTP, enter the latitude and longitude on Google Maps to query a location.

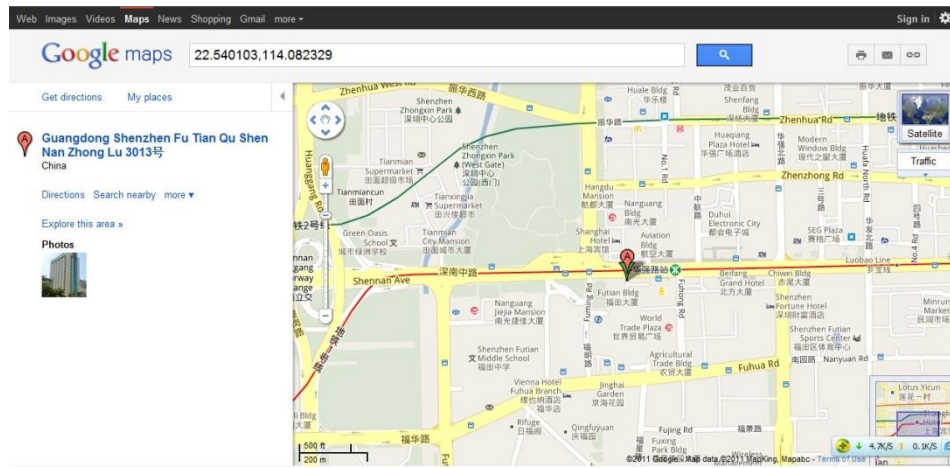

## 6.5 Common SMS Commands

### 6.5.1 Real-Time Location Query – A00

SMS sending: 0000,A00

SMS reply: Now,Date and time,Positioning status,GSM signal strength,Speed, Remaining battery power,Map link

Description: This command is used to query tracker's current location.

Example:

Sending: 0000,A00

Reply: Now,160721 16:40,V,12,56Km/h,97%,<http://maps.meigps.com/?lat=22.513015&lng=114.057235>

### 6.5.2 Setting Authorized Phone Numbers – A71

SMS sending: 0000,A71,Phone number 1,Phone number 2,Phone number 3

SMS reply: IMEI,A71,OK

Description:

Phone number: A phone number has a maximum of 16 bytes. If no phone numbers are set, leave them blank. Phone numbers are empty by default.

Phone number 1/2/3: Set these phone numbers to authorized phone numbers. When you call the tracker by using these phone numbers, you will receive SMS notification about the location, geo-fence alarm and low power alarm and SMS notification or a call about the unauthorized door open and unauthorized ignition.

If you need to delete all authorized phone numbers, send **0000,A71**.

Example:

Sending: 0000,A71,13811111111,13822222222,13833333333

Reply: 353358017784062,A71,OK

### 6.5.3 Setting the Smart Sleep Mode – A73

SMS sending: 0000,A73,*Sleep level*

SMS reply: IMEI,A73,OK

Description:

When the sleep level is **0**, the sleep mode is disabled (default).

When the sleep level is **1**, the tracker enters the normal sleep mode. The 3G module always works, and the GPS module occasionally enters the sleep mode. The tracker works 25% longer in the normal sleep mode than that in the normal working mode. This mode is not recommended for short interval tracking; this will affect the route precision.

When the sleep level is **2**, the tracker enters the deep sleep mode. If no event (SOS, button changes, incoming calls, SMSs, or vibration) is triggered after five minutes, the GPS module will stop working, and the 3G module will enter sleep mode. Once an event is triggered, the GPS and 3G modules will be woken up.

Note: In any condition, you can use an SMS command to disable the sleep mode, and then the tracker exits the sleep mode and returns back to the normal working mode.

Example:

Sending: 0000,A73,2

Reply: 353358017784062,A73,OK

### 6.5.4 Controlling Output Status – C01

SMS sending: 0000,C01,*Speed,ABCDE*

SMS reply: IMEI,C01,OK

Description:

When the speed is **0**, no speed limit exists. That is, when the tracker receives a command, the output control takes effect immediately.

When the speed is a value ranging from 1 to 255 (unit: km/h), set the speed limit for output control. When the driving speed is lower than the speed limit, the output control takes effect.

ABCDE: indicates the output 1, output 2, output 3, output 4, and output 5 respectively. When the parameter value is **0**, the output is disabled. When the parameter value is **1**, data will be generated according to preset output mode. When the parameter value is **2**, previous status will be remained.

Example:

Sending: 0000,C01,10,10000

Reply: 353358017784062,C01,OK

### 6.5.5 Setting I/O Port Status – C08

SMS sending: 0000,C08,IO0:Mn,IO1:Mn,IO2:Mn,IO3:Mn,IO4:Mn

SMS reply: IMEI,C08,IO0:Mn,IO1:Mn,IO2:Mn,IO3:Mn,IO4:Mn

Description:

1. IO0, IO1, IO2, IO3, and IO4 indicate I/O ports.  
IO0: open collector by default (yellow cable)

IO1: 1-Wire interface by default (green cable)

IO2: negative input by default (grey cable)

IO3: positive input by default (white cable)

IO4: AD input by default (blue cable)

2. Mn indicates the I/O port status. The parameter value is as follows:

0: low trigger

1: high trigger

2: AD input

4: open collector

5: low output


6: PWM output

8: 1-Wire

3. You can set one or multiple input ports at the same time. The command **0000,C08** is used to read I/O port parameters.

Note:

1. IO0: **Mn** parameter value is 4, 5, or 6.
2. IO1: **Mn** parameter value is 0, 4, 5, or 8.
3. IO2: **Mn** parameter value is 0, 1, or 2.
4. IO3: **Mn** parameter value is 0, 1, or 2.
5. IO4: **Mn** parameter value is 0, 1, or 2.

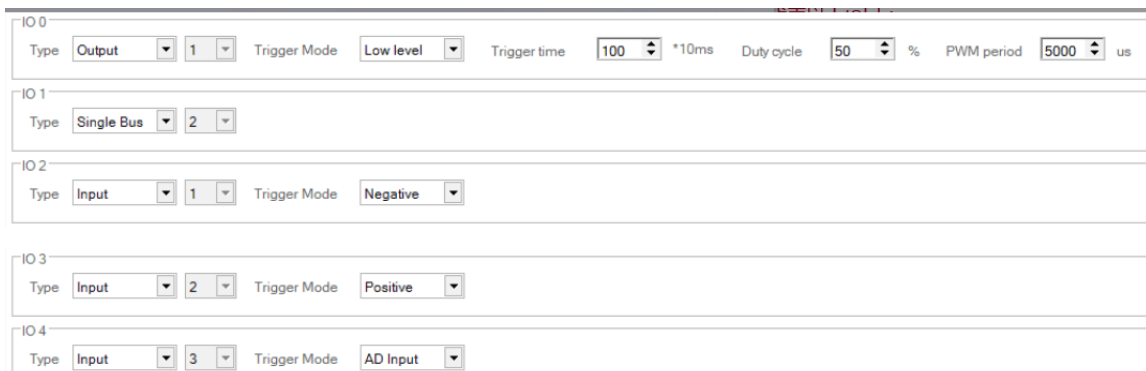

Example:

Sending: 0000,C08,IO0:5

Reply: 353358017784062,C08,IO0:5,IO1:0,IO2:2,IO3:2,IO4:1

### 6.5.6 Setting Idling Time – D34

SMS sending: 0000,D34,*Time*

SMS reply: IMEI,D34,OK

Description:

Time: When the device detects that the driving speed is 0 and the ACC is on (input 2 activated) for consecutive several minutes, an idling alarm will be generated.

Value range: 0–65536; unit: minute; default value: 1 minute

Example:

Sending: 0000,D34,1

Reply: 353358017784062,D34,OK

**For details about SMS commands, see the *MEITRACK SMS Protocol*.**

Note:

1. The default SMS command password is **0000**. You can change the password by using Meitrack Manager and SMS command.
2. The device can be configured by SMS commands with a correct password. After an authorized phone number is set, only the authorized phone number can receive the preset SMS event report.

## 7 Logging In to MS03 Tracking System

Visit <http://ms03.trackingmate.com>, enter the user name and password, and log in to the MS03. (Purchase the login account from your provider.)

For more information about how to add a tracker, see the *MEITRACK GPS Tracking System MS03 User Guide* (chapter 4 "Getting Started").

**The MS03 supports the following functions:**

- Track by time interval or distance.
- Query historical trips.
- Set polygonal geo-fences.
- Bind driver and vehicle information.
- View various reports.
- Send commands in batches.
- Support OTA updates.

For details, see the *MEITRACK GPS Tracking System MS03 User Guide*.

## 8 Installing the T366G

### 8.1 Installing an I/O Cable

#### 8.1.1 Interface Definition

The I/O cable is an 8-pin cable, including the power, analog input, and negative/positive input and output interfaces.




|                |              |                  |                  |                 |               |                       |                       |
|----------------|--------------|------------------|------------------|-----------------|---------------|-----------------------|-----------------------|
| 1<br>Power (+) | 2<br>GND (-) | 3<br>Input 1 (-) | 4<br>Input 2 (+) | 5<br>AD input 1 | 6<br>Output 1 | 7<br>1-wire interface | 8<br>5 V output cable |
|----------------|--------------|------------------|------------------|-----------------|---------------|-----------------------|-----------------------|

| Pin Number           | Color  | Description   |
|----------------------|--------|---|
| 1 (Power +)          | Red    | Positive charge of the power input, connected to the positive charge of the vehicle battery. Input voltage: 11–36 V. 12 V or 24 V is recommended.   |
| 2 (GND)              | Black  | Ground wire, connected to the negative charge of the vehicle battery or to the negative terminal.   |
| 3 (Input 1)          | Grey   | Digital input, negative trigger. The port can be configured as positive trigger or AD input 2 (0–30 V).<br>Connect to a door trigger signal cable to detect vehicle door status. (Most Chinese, Korean, and Japanese cars are negative edge-triggered.)   |
| 4 (Input 2)          | White  | Digital input, positive trigger. The port can be configured as negative trigger or AD input 3 (0–30 V).<br>Connect to the vehicle ACC cable by default to detect the vehicle ACC status.  |
| 5 (AD input 1)       | Blue   | Analog input with 12-bit resolution and valid voltage 0–30 V.<br>The port can be configured as input 3 (positive/negative).   |
| 6 (Output 1)         | Yellow | Valid: low level (0 V)<br>Invalid: open collector<br>Maximum voltage for output open collector (invalid): 60 V<br>Maximum current for output low level (valid): 500 mA<br>Set the PWM output (output time and adjustable pulse width).<br>Connect to an external relay to remotely cut off the vehicle fuel cable or engine power supply. |
| 7 (1-wire interface) | Green  | Connect to the iButton and other devices supporting 1-wire protocol.<br>The port can be configured as negative input 4 or output 2 open collector.  |
| 8 (5 V output cable) | Pink   | 5 V output<br>It can be connected to the power supply of a temperature sensor.  |



### 8.1.2 Wiring Diagram

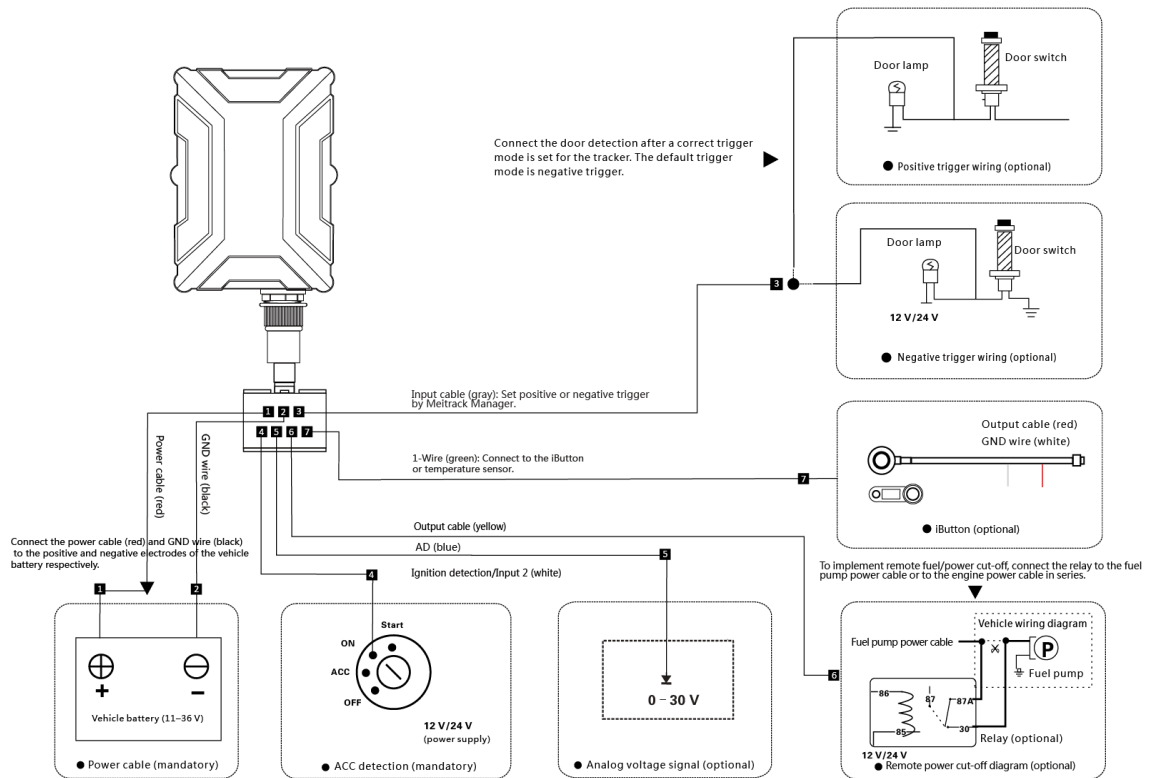

### 8.2 Mounting the T366G

Mount the device in the vehicle by cable tie.

Note: Do not install it at a metal covered place.

If you have any questions, do not hesitate to email us at [info@meitrack.com](mailto:info@meitrack.com).