

SRX-360 FEATURES

- PIR and MW sensor with 360° coverage pattern.
- Up to 3.6m mounting height.
- 360°/20m diameter coverage when mounted at 3.6m.
- Fully sealed sensor chamber.
- VLSI Technology (Very Large Scale Integration).
- Omni directional 4 Element Pyro Sensor.
- Microwave detection based on Doppler concept.
- Unique Microwave Motion Sensor Module with microstrip patch antenna.
- AND & OR alarm signal selection.
- 2-way Microwave sensitivity adjustment.
- 2-way PIR sensitivity adjustment.
- Sophisticated signal processing.
- Hard Spherical Lens 360° coverage.
- Bidirectional temperature compensation.
- Flourescent light stability.
- Maximum RFI & EMI Immunity.

The SRX-360 is a combination of 4-element passive infrared intrusion detector for use in ceiling mount applications & MW detector, providing protection from intruders by PYRO sensor element and MW (based on Doppler concept).

Using micro controller for PIR & MW signal analyzing, with special ASIC technology for PIR pulse processing, assure "false alarm free" operation.

HARD SPHERICAL LENS

The SRX-360 is equipped with a special hard lens. This lens is the latest development in the security field and complies with all the new standards requirements. It gives wide coverage patterns, even at low mounting heights. It is especially immune to sunlight, halogen lights and fluorescent lights and is impervious to attack.

WIRE SIZE REQUIREMENTS

Use #22 AWG (0.5 mm) or wires with a larger diameter. Use the following table to determine required wire gauge (diameter) and length of wire between the detector and the control panel.

Wire Length	m	200	300	400	800
Wire Diameter	mm	.5	.75	1.0	1.5
Wire Length	ft.	800	1200	2000	3400
Wire Gauge	#	22	20	18	16

MOUNTING THE DETECTOR

Choose location most likely to intercept an intruder. Refer to the following recommendations for best installation location.

4

• Temperature changes

Do not install the detector outdoor or in a place exposed to sudden temperature changes or near equipment such as air conditions, ventilation, fans, heaters etc.

Bright light

Avoid bright light, direct or reflected sunlight, automobile headlights or other light sources.

• Moving or vibrating objects.

As the curtains, blinds and other waving items may activate the detector avoid moving and vibrating objects.

• Clean atmosphere


The atmosphere should be clean and clear of contaminants. When water, water vapor, oil or etc make contact with the detector – it may cause malfunction.

Curtains, Glass and Screens

Infrared energy can not pass through opaque objects or transparent and semi transparent objects such as glass, paper, curtains and etc, that is why the opposite sides of curtains, glass, screens are blind spots.

Detection zones

To choose location carefully, please, refer to pattern of the detection zones provided with the unit.

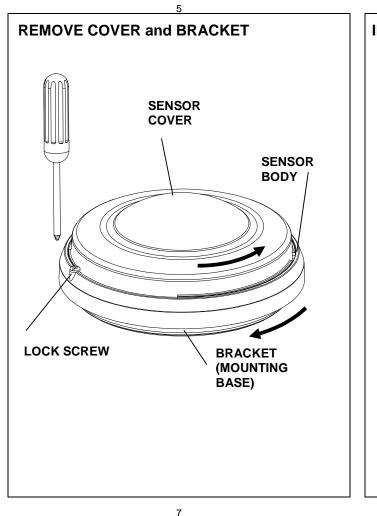

WIRING AND CONNECTING

Connect wires to terminals in accordance with the following instructions:

Terminal marked " - " (GND)

Connect to ground of the control panel.

Terminal marked " + " (+ 12V)

Connect to a positive Voltage output of 8.2-16 Vdc source (usually from the alarm control unit).

Terminals marked "TAMPER "

If a Tamper function is required connect These terminals to a 24hour normally closed protective zone in the control unit. If the front cover of the detector is opened, an immediate alarm signal will be sent to the control unit.


Terminals marked " RELAY "


These are the output relay contacts of the detector. Connect to a normally closed zone in the control panel.


INSTALLATION 1. Remove Cover Remove cover from detector body by loosening the lock-screw about 5mm and turning the cover counterclockwise. 2. Remove Body from Bracket. The body is removed from base by turning it counterclockwise. 3. Mount Bracket to ceiling Place the bracket at the ceiling. Mark and drill 4 holes for bracket installation at the ceiling. Insert the cables through the appropriate grooves in the silicon gasket. Mount the bracket to ceiling. 4. Wiring and Connecting Connect the wires to terminals in accordance with the instructions in page 7 and 8. 5. Attach Detector Body Place detector body with the sign arrow against the dot market on the bracket. Turn clockwise until the sign arrow on body placed in front of the sign arrow on bracket. 6. Attach Cover Place the four tabs of the cover in to the matching notches in the base and turn the cover clockwise until it is fit tightly. Tighten the external lock screw.


BRACKET WITH SILICON GASKET AND WIRES TERMINALS.


8

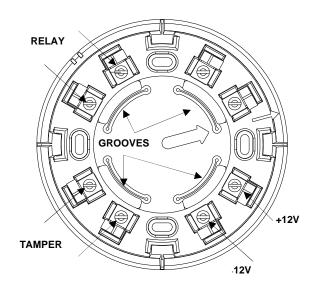

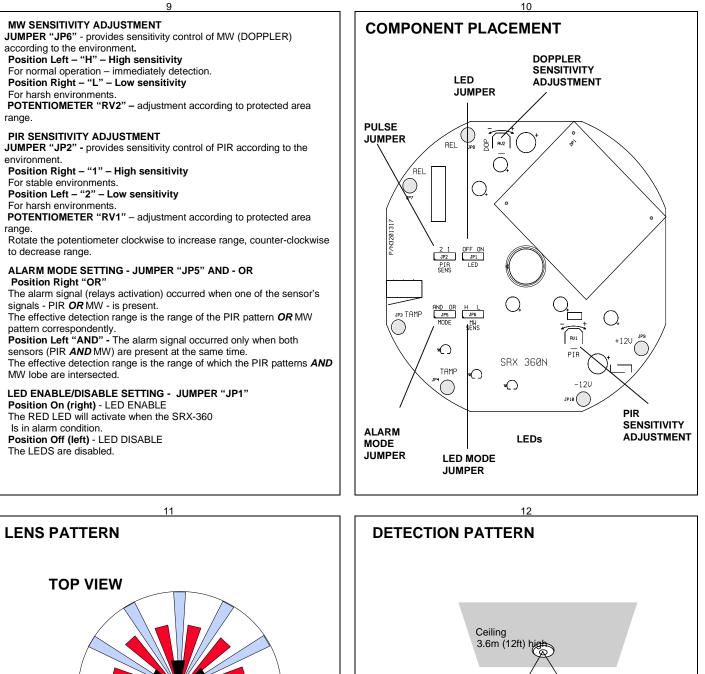

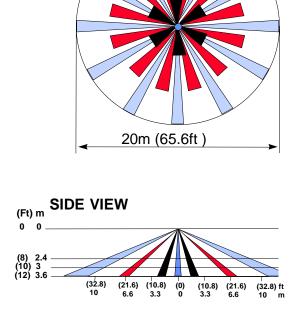

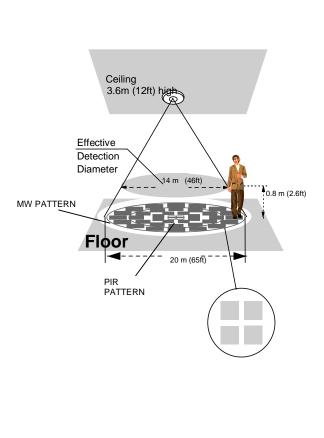

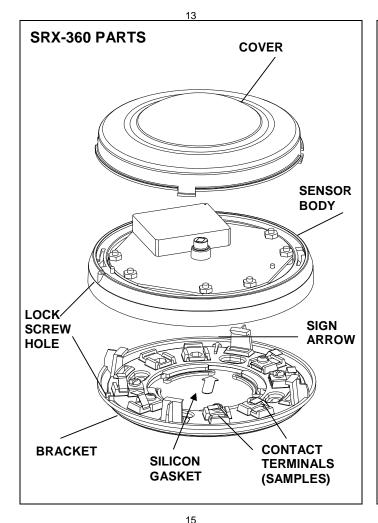

CROW ELECTRONIC ENGINEERING LTD. ("Crow") - WARRANTY POLICY CERTIFICATE

This Warranty Certificate is given in favor of the purchaser (hereunder the "Purchaser") purchasing the products directly from Crow or from its authorized distributor.

Crow warrants these products to be free from defects in materials and workmanship under normal use and service for a period of 24 months from the last day of the week and year whose numbers are printed on the printed circuit board inside these products (hereunder the "Warranty Period").

Subject to the provisions of this Warranty Certificate, during the Warranty Period, Crow undertakes, at its sole discretion and subject to Crow's procedures, as such procedures are form time to time, to repair or replace, free of charge for materials and/or labor, products proved to be defective in materials or workmanship under normal use and service. Repaired products shall be warranted for the remainder of the original Warranty Period.

All transportation costs and in-transit risk of loss or damage related, directly or indirectly, to products returned to Crow for repair or replacement shall be borne solely by the Purchaser.

Crow's warranty under this Warranty Certificate does not cover products that is defective (or shall become defective) due to: (a) alteration of the products (or any part thereof) by anyone other than Crow; (b) accident, abuse, negligence, or improper maintenance; (c) failure caused by a product which Crow did not provide; (d) failure caused by software or hardware which Crow did not provide; (e) use or storage other than in accordance with Crow's specified operating and storage instructions.

There are no warranties, expressed or implied, of merchantability or fitness of the products for a particular purpose or otherwise, which extend beyond the description on the face hereof.

This limited Warranty Certificate is the Purchaser's sole and exclusive remedy against Crow and Crow's sole and exclusive liability toward the Purchaser in connection with the products, including without limitation - for defects or malfunctions of the products. This Warranty Certificate replaces all other warranties and liabilities, whether oral, written, (non-mandatory) statutory, contractual, in tort or otherwise.

In no case shall Crow be liable to anyone for any consequential or incidental damages (inclusive of loss of profit, and whether occasioned by negligence of the Crow or any third party on its behalf) for breach of this or any other warranty, expressed or implied, or upon any other basis of liability whatsoever. Crow does not represent that these products can not be compromised or circumvented; that these products will prevent any person injury or property loss or damage by burglary, robbery, fire or otherwise, or that these products will in all cases provide adequate warning or protection.

Purchaser understands that a properly installed and maintained product may in some cases reduce the risk of burglary, fire, robbery or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or properly loss or damage as a result.

Consequently, Crow shall have no liability for any personal injury; property damage or any other loss based on claim that these products failed to give any warning.

If Crow is held liable, whether directly or indirectly, for any loss or damage with regards to these products, regardless of cause or origin, Crow's maximum liability shall not in any case exceed the purchase price of these products, which shall be the complete and exclusive remedy against Crow.

35317CE50

14

Model SRX-360 **Detection Method** Four element PIR & microwave pulse Doppler Power Input 8.2 to 16 Vdc Current Draw Active : 25.5 mA Standby: 16.5 mA Temperature Compensation YES Alarm Period 2 +/- 1 sec Alarm Output N.C 28Vdc 0.1 A with 10 Ohm series protection resistors Tamper Switch N.C 28Vdc 0.1A with 10 Ohm series protection resistor - open when cover is removed Warm Up Period 1 min LED Indicator Yellow LED is blinking during warm up period and self testing Red LED is ON during alarm Red LED: UNIT ALARM Green LED: PIR CHANNEL Yellow LED: MW CHANNEL Operating Temperature -20°C to +50°C(-4°F to +122°F) **RFI** Protection 30V/m 10 - 1000MHz **EMI** Protection 50,000V of electrical interference from lightning or power through Visible Light stable against halogen light 2.4 m (8ft) or Protection reflected light Dimensions 131mm x 57mm (5.2" x 2.25") Weight 185gr (6.52 oz)

Crow reserves the rights to change specifications without prior notice

16

CROW ELECTRONIC ENGINEERING LTD.				
ISRAEL:	57 Hamelacha St., Holon 58855			
	Tel: 972-3-5569937 /8 /9			
	Fax: 972-3-5592981			
	E-mail: <u>support@crow.co.il</u>			
USA:	2160 North Central Road,			
	Fort Lee, N.J. 07024			
	Tel: 1-800-GET CROW			
	or (201) 944 0005			
	Fax: (201) 944 1199			
	E-mail: <u>support@crowelec.com</u>			
	429 Nepean HWY Brighton East Vic 3187			
	Tel: 61-3-9596 7222			
	Fax: 61-3-9596 0888			
	E-mail: crow@crowaust.com.au			
POLAND:	VIDICON SP. ZO. O.			
	15 Powazkowska st.			
	01-797 Warsaw Poland			
	Tel: 48 22 562 3000			
	Fax: 48 22 562 3030			
	E-mail: vidicon@vidicon.pl			
LATIN AMERICA:				
	5753 NW 151 ST .Street			
	MIAMI LAKES,			
	FL 33014 – USA			
	Tel: +1-305-823-8700			
	Fax: +1-305-823-8711			
	E-mail: sales@crowlatinamerica.com			
ITALY:	DEATRONIC			
	VIA Giulianello 4/14			
	00178 ROMA, ITALY			
	Tel: +39-0676-12912			
	Fax: +39-0676-12601			
	E-mail: info@deatronic.com			
These instructions supersede all previous issues in				
circulation prior to April 2005.				