

Receptacle Tester - Standard

NT-1933

- Tests for correct wiring, open ground, reverse polarity, open hot, open neutral, hot on neutral, hot and ground reversed with open hot and ground fault interruption in 3-wire, 120 VAC circuits.



Light pattern indicates condition of wiring

OPEN GROUND	○ ● ○	Ground contact not connected
OPEN NEUTRAL	○ ○ ●	Neutral contact not connected
OPEN HOT	○ ○ ○	Hot contact not connected
HOT/GRD REVERSE	● ○ ●	Hot and ground contacts interchanged
HOT/NEU. REVERSE	● ● ○	Hot and neutral contacts interchanged
CORRECT	○ ● ●	Receptacle is wired correctly