




In or Out... we make it Easy!®

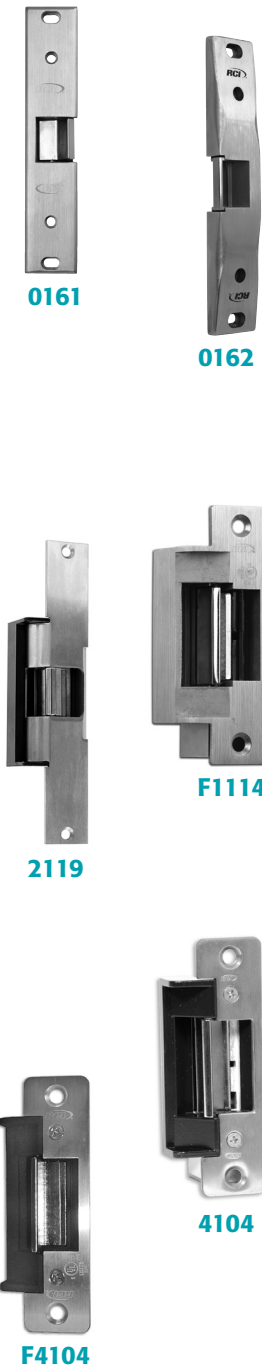


RCI	Folger Adam	Von Duprin	HES	Adams Rite	Trine	ROFU
0 SERIES – Commercial Duty (Retrofit & Rim Exit Device)						
0141	–	–	–	–	–	–
0161	310-4	6112	9600	71R1, 74R1	EN-800	1960
0162		6300	9600		4800	
F1 SERIES – Fire-Labeled Heavy-Duty (Centerline Latch Entry)						
F1114 (ANSI)	712 (ANSI)	6211 (ANSI)	7501 (ANSI)	–	–	1450 (ANSI)
F1119	310-2	6215 & 6226	–	–	–	–
2 SERIES – Heavy Duty (Offset & Centerline Latch Entry)						
2114	712	6211	1006J, 1006N, 4500, 5200-501, 7000-701	7170	EN400, EN400RS	1450
2124	732	6210	1006KM	–	EN-435	1430
2134	732	6210	1006KD	–	EN-436	1440
2119	310-2, 310-2¾	6214, 6215, 6224, 6226	1006K2	–	EN-900 EN-950, EN960	–
2314	712, 712-75	6211	1006JFS	7170	EN-400	1403 RADIUS
2324	732	6211WFFS	1006KM-FS	–	–	3440
2334	732	6210FS	1006KD-FS	–	–	3440
2319	310-2, 310-2¾	6214, 6215, 6224, 6226	1006K2FS	–	EN-900, EN-950, EN960	–
4 SERIES – Commercial Duty (Centerline Latch Entry) - with FREE Trim Plate in Every Box**						
4104	–	–	5200-501A	7100	2012RD, 2012RS	1402, 1702
4304	–	–	5200-501A	7100	2012RD, 2012RS	1402
4114	–	–	1006J, 1006N, 4500, 5200-501, 7000-701	7140	2012	1450
4314	–	–	4500, 5200-501, 7000-701	7140	2012, 2012RS	1702, 3402
4107	–	–	5000-503	7130	2678, 2678FS	1403, 1703, 3403
4307	–	–	5000-503	7130	2678, 2678FS	1403, 1703, 3403
4108	–	–	5200-502, 7000-702	7110	2002, 2002WR	1404, 3404
4308	–	–	5200-502, 7000-702	7110	2002, 2002WR	1404, 3404
4119	310-2, 310-2¾	–	7505	–	EN-900 EN-950, EN960	–
4319	310-2, 310-2¾	–	7505	–	EN-900 EN-950, EN960	–
F4 SERIES – Fire Labeled (Centerline Latch Entry)						
F4104	–	–	1006J/4500	–	–	–
F4114	712/732	6211WF	1006J	7240	EN400, EN400RS	1450

Note: The electric strikes in this chart were designed to dimensionally fit in the same jamb cutouts. Some features and specifications may vary.

* Requires Additional Information ** Excludes the 4119, 4319, and F4 Fire Labeled Electric Strikes



In or Out... we make it Easy!®

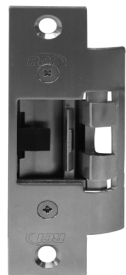

5514/5514LM



S6504/L6504



7105



11BS

RCI	Folger Adam	Von Duprin	HES	Adams Rite	Trine	ROFU
5 SERIES - Commercial Duty (Centerline Latch Entry) No Cut						
5514			8000 (was 5900)			
6 SERIES - Commercial Duty (Multifunctional Centerline Latch Entry) - with FREE Trim Plate in Every Box**						
S6504	-	5100L	1006J, 5200-501A, 7001	7160	EN400, EN400RS	2402
L6504	-	5100	5000-501A	7100, 7400	2012RD, 2012RS	-
S6514	-	-	1006J, 4500, 5200, 5200-501A, 5300, 7001	7170	EN400, EN400RS	-
L6514	-	-	4500, 7000-701, 5000-501	7140, 7440	2012, 2012RS	-
S6505	-	-	-	-	-	-
L6505	-	-	-	7330	-	-
S6507	-	-	5200-503	7131	2678	-
L6507	-	-	5000-503	1403, 1703, 3403	2678, 2678FS	-
S6508	-	5100	5200-502, 7000-702	7110, 7410	2002, EN400	2404
L6508	-	5100	5000-502, 7000-702	7110, 7410	2002, EN400	-
S65U	-	5100	-	-	-	-
L65U	-	5100	-	-	-	-
7 SERIES - Commercial Duty (Centerline Latch Entry) Adjustable - with FREE Trim Plate in Every Box**						
7104	504, 504FS	5100, 6211AL, 6213ALDS	5000-501A	7100	-	1702
7304	504, 504FS	5100, 6211AL, 6213ALDS	5000-501A	7100	-	1702
7114	502, 502S	6211AL	5000-501	7140	2007	1702, 3402
7314	502, 502S	6211AL	5000-501	7140	2007	1702, 3402
7107	505, 505FS	-	5000-503	1403, 1703, 3403	2678, 2678FS	1403, 1703, 3403
7307	505, 505FS	-	5000-503	1403, 1703, 3403	2678, 2678FS	1403, 1703, 3403
7108	-	5100	5000-502	7110	2002	1404, 3404
7308	-	5100	5000-502	7110	2002	1404, 3404
7119	310-2, 310-2¾	6214, 6215, 6224, 6226	7505	-	EN-900 EN-950, EN960	-
7319	310-2, 310-2¾	6214, 6215, 6224, 6226	7505	-	EN-900 EN-950, EN960	-
ECONOMY STRIKES - Light Duty (Offset & Centerline Latch Entry)						
11BS	-	-	-	-	005/S005	1108
15BS	-	-	-	-	HD001	1505
15CA	-	-	-	-	014W	1508

Note: The electric strikes in this chart were designed to dimensionally fit in the same jamb cutouts. Some features and specifications may vary. * Requires Additional Information ** Excludes the 4119, 4319, and F4 Fire Labeled Electric Strikes