

Multi-Channel 36VDC Power Supply HD-TVI/CVI/AHD/CVBS 4 in 1 Video Receiver Hub







KIT-TT4PVTURBO

KIT-TT8PVTURBO

KIT-TT16PVTURBO

Features

- ▶ Provides camera power while receiving video transmission both over one single 4-pair UTP cat5e/6 cable
- No additional power supply needed for cameras
- Transmit 36VDC power up to 1000ft /305m working with transmitter (convert 36VDC into regulated 12VDC) for 12VDC camera
- Female BNC connector and RJ45 Jack
- Real-time transmission
- Exceptional interference rejection
- Ground loop isolation
- Built-in TVS for surge protection
- Lightning protection design Grade: III
- ▶ Wave Filter Design, Anti-Static Design

- ► Compatible with all HD-TVI, HD-CVI, AHD & CVBS analog cameras
- ▶ Color video max up to 440m(1443ft) for HD-CVI 720P camera If you adjust saturation of DVR, max up to 470m(1541ft) Color video max up to 230m(754ft) for HD-CVI 1080P camera
- Color video max up to 190m(623ft) for Hikvision TVI 720P camera Color video max up to 190m(623ft) for Hikvision TVI 1080P camera
- Color video max up to 230m(754ft) for TVT HD-TVI 720P camera Color video max up to 220m(721ft) for TVT HD-TVI 1080P camera
- Color video max up to 320m(1049ft) for AHD 720P camera Color video max up to 320m(1049ft) for AHD 960P camera Color video max up to 250m(820ft) for AHD 1080P camera
- Color video max up to 400m(1312ft) for CVBS camera

CEF© - RoHS-

Installation and Operation

Before permanently securing the unit for final installation of cabling behind walls or ceilings, test for proper operation of the unit and the cables in your system.

Camera End: Connect transmitter to the camera's video and DC power connector. Insert UTP cat5e/6 into RJ 45 jack of transmitter.



Transmitter: convert 36VDC to regulated 12VDC at camera


DVR End: There're RJ45 jack labeled "UTP In" and Female BNC connectors labeled "BNC out" on the receiver hubs.






BNC OUT

Insert one end of coaxial patch cord into Female BNC connectors of receiver' hub and the other end into Female BNC connectors of DVR.



Terminate the incoming UTP cat5e/6 cable from transmitter into your RJ45 jack of 4/8/16 Video & Power Receiver hubs.




Switch on the Video & Power Receiver Hub using the on/offf switch.

Quick Setup Guide

- Step 1: Begin with all input/output devices turned off with power cables removed.
- Step 2: Connect video source and UTP cat5e/6 cabling to transmitter
- Step 3: Connect video display and/or DVR to "BNC output" of Receiver Hub
- Step 4: Terminate the incoming UTP cat5e/6 cable into your RJ45 jack "UTP In" (See RJ 45 jack Pin Assignment)
- Step 5: Power on all input/output devices

Application Example

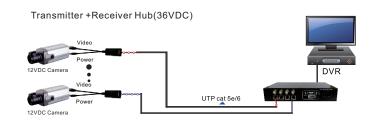




Wiring Scheme

Notes: 1. You can use either T568A or T568B cables,

Make sure that both transmitter and receiver ends use the same wiring.

2. The maximum cable length is 1000ft(305m). For voltage drops over long distances, refer to the table further in this manual.

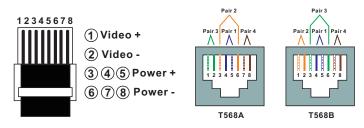

	Video+	Video-	Power-		Power-			
	1	2	3	4	5	6	7	8
T568A:	White Green	Green	White Orange	Blue	White Blue	Orange	White Brown	Brown
T568B:	White Orange	Orange	White Green	Blue	White Blue	Green	White Brown	Brown





Transmitter end

Receiver end

Yellow LED ON: OvercurrentGreen LED ON: Power ON

Video & Power Distance Chart

Power Distance

Power up to 305m(1000ft) with FS-HD4301VPCT for 12VDC HD camera

Video Distance Chart:

HD transmitter	HD receiver	Camera type	Distance
	KIT-TT4PVTURBO KIT-TT8PVTURBO KIT-TT16PVTURBO	HD-CVI	720P 400m(1312ft) 1080P 220m(721ft)
FS-HD4301VPCT		HD-TVI	720P 190m(623ft) 1080P 190m(623ft)
		AHD	720P 300m(984ft) 960P 250m(820ft) 1080P 230m(754ft)
		CVBS	400m(1312ft)

Notes: 1. Wire should be category 5e rated Unshielded Twisted-Pair (UTP) cable.

- 2. CCTV camera's input voltage is 12VDC, because of $\pm 10\%$ voltage fluctuation, so we test it in the minimum voltage 10.8VDC.
- 3. The distance between the camera and the remote video device must not exceed 1000ft(305m) for color.
- Actual distance will depend on the camera's inrush and operating current, minimum operating voltage, and the wire's environmental temperature.

CEF© - RoHS-

Mechanical/Technical Specifications

Pi	roduct Name	36VDC Power Supply HD Video Receiver Hub				
	Model	KIT-TT4PVTURBO	KIT-TT8PVTURBO	KIT-TT16PVTURBO		
Applied Devices		CCTV cameras, monitors, DVR, switchers, IP encoders, and other CCTV equipment				
	Video Format	HD-TVI/CVI/AHD/CVBS				
	Operating Frequency	DC to 42MHz				
	Man Distance	CVI 720P:400m(1312ft) T	VI 720P: 190m (623ft)	AHD 720P: 300m (984ft)		
Video	Max Distance	CVI 1080P:220m (721ft) T	VI 1080P: 190m (623ft)	AHD 960P: 240m (787ft) AHD 1080P: 220m (721ft)		
video	Common- mode/Differential-mode	15KHz to 42MHz 60 dB typ				
	Impedanc	Coax: Male BNC 75ohms				
		UTP:RJ45 100ohms				
	Attenuation	0.5 dB typ				
Wire Type	Network Wiring	One four-pair UTP Cat5e or better per channel				
	Category Type	UTP cat 5e or better				
Wile Type	Impedance	100 ± 20 ohms				
	DC Loop Resistance	52 ohms per 1,000ft (18 ohms per 100m)				
	Differential Capacitance	19 pF/ft max (62 pF/m max)				
	Power Input	110VAC/220VAC ,50/60Hz				
Power	Power transmission	36VDC, up to 1000ft/305m via UTP cat5e/6				
	Power consumption	150W	150W	300W		
	Output power per channel	18.5W(max)				
	Video input	RJ45 Jack				
Connector	Video output	Female BNC connector				
Protection	Surge Protection	Built-in Transient Voltage Suppressor(TVS)				
	Antistatic	YES				
	Dimensions(L*W*H)	351*183*44.5mm (mounting bracket excluded)	351*183*44.5mm (mounting bracket excluded)	557*245*66.5mm (mounting bracket excluded)		
Mechanical	Housing	Black galvanized				
	Body Color	Black				
	Net Weight	2060g	2280g	3890g		
	Operating Temperature	-25° ~ 75° C				
Environmental	Relative Humidity	0~95% (non-condensing)				
	Storage Temperature	-40° ~ 150° C				
		•		'		

Warning !

▲ Important Product Warnings:

- Always test for proper operation of the unit before permanently securing to final location.
- 2. Connect all cables before providing power to the unit.

▲ Safety Instructions

Please be sure to follow these instructions for safe operation of your unit.

- 1.Read these instructions.
- Keep these instructions.
- 3.Heed all warnings.
- 4.Follow all instructions.
- 5. Keep this apparatus away from children and unauthorized users.
- 6.Do not use this apparatus near water.
- 7.Clean only with dry cloth.
- 8.Indoor use only. To reduce the risk of electrical shock, keep this apparatus away from rain, moisture, splashing and dripping liquids. Never put objects filled with liquid on top of or close to the apparatus.
- 9.Do not block any ventilation openings.
- 10.Install in accordance with the manufacturer's instructions.
- 11.Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus(including amplifiers) that produce heat.
- 12.Always disconnect mains power when this apparatus not in use or when servicing or maintenance activities are performed. Handle the power cord by the plug only.
- 13. Only use attachments/accessories specified by the manufacturer.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warranty

- 1.All manufactured products are built to high manufacturing standards and provide one year warranty.
- To reduce the risk of electrical shock, DO NOT disassemble or open the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.
- 3.All modifications of the apparatus are forbidden for safety reasons. Damage caused by user modifications to the apparatus is not covered by the warranty.
- Damaged by disregard of certain guidelines in this manual is not covered by the warranty.